




**® Illumination Technologies, Inc.**

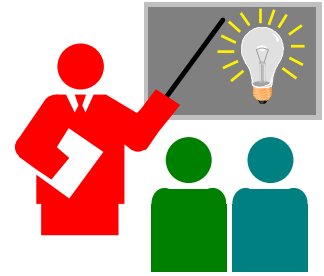


# Technical Note: 123

**Question:** How do I build an **RS-232** communications cable to remotely operate and monitor the **4900** lightsource?

**Answer:** The **4900** lightsource can be operated via the built-in serial communications interface. In order to access the interface using a standard computer COM port, construct a serial communications cable using the schematic below:

Solder Cup View of Connectors

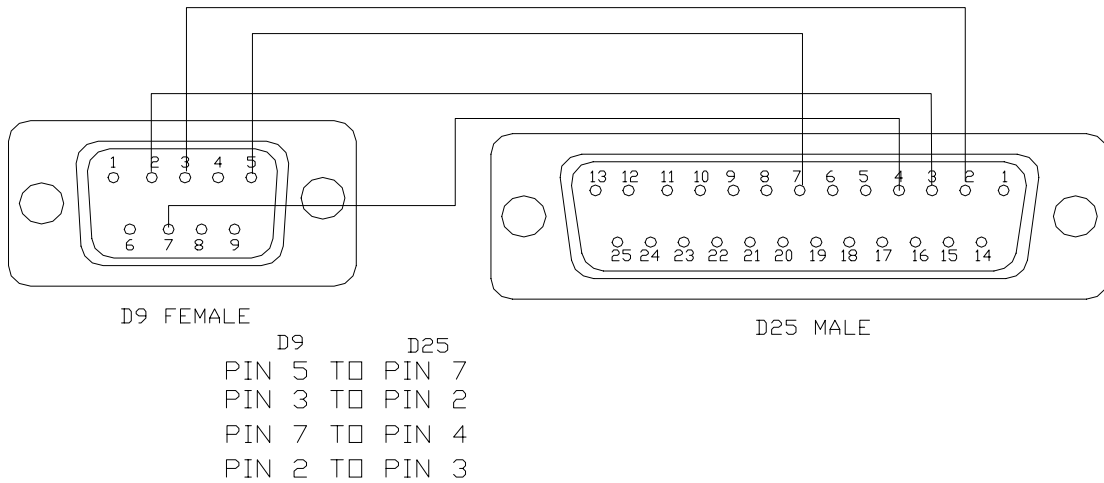

**Illumination Technologies, Inc.**  
 5 Adler Drive, East Syracuse, NY 13057 USA  
 TEL: 315-463-4673 FAX: 315-463-1401  
 E-mail: [info@illuminationtech.com](mailto:info@illuminationtech.com)  
<http://www.illuminationtech.com>