




® Illumination Technologies, Inc.

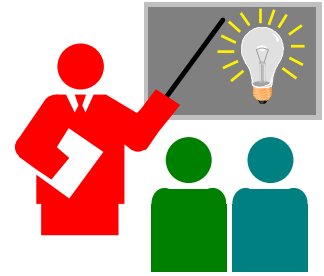


Technical Note: 123

Question: How do I build an **RS-232** communications cable to remotely operate and monitor the **4900** lightsource?

Answer: The **4900** lightsource can be operated via the built-in serial communications interface. In order to access the interface using a standard computer COM port, construct a serial communications cable using the schematic below:

Solder Cup View of Connectors

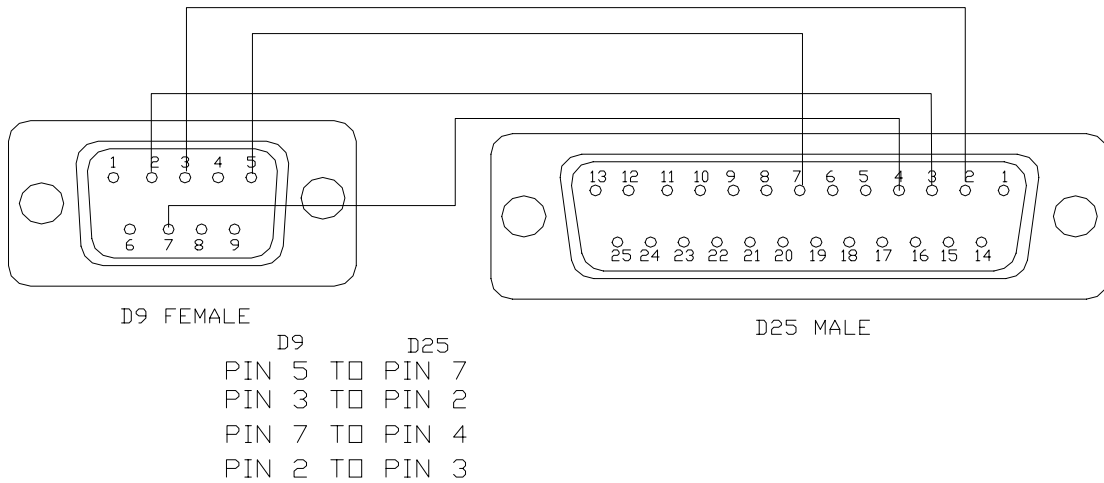

Illumination Technologies, Inc.
 5 Adler Drive, East Syracuse, NY 13057 USA
 TEL: 315-463-4673 FAX: 315-463-1401
 E-mail: info@illuminationtech.com
<http://www.illuminationtech.com>